


MANUEL






AVERTISSEMENTS



Set Active Box in lock position when you are not wearing MATE.

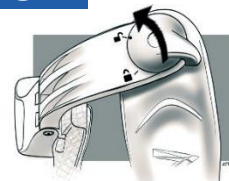

DÉBALLAGE & PRÉPARATION MATE

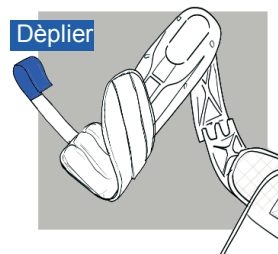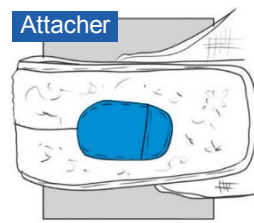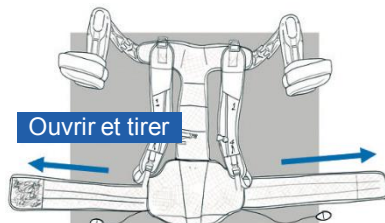

RÉGLAGE

Lisez attentivement le manuel avant de porter l'appareil pour la première fois.





LARGEUR D'ÉPAULE

Desserrer le bouton

Tirer / Relâcher

Serrer le bouton


Faire référence au manuel pour le niveau de réglage

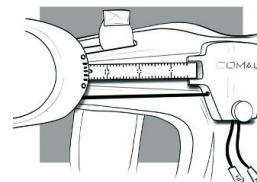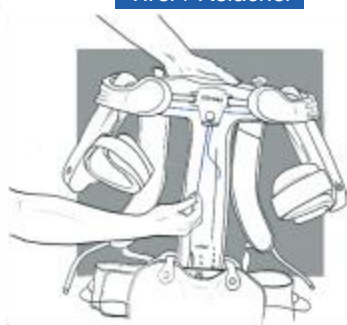

LONGUER DU DOS


Enlever le velcro

Ouvrir et tirer

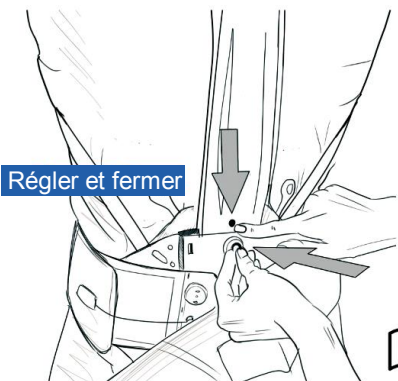

ANGLE DE L'ACTIVE BOX

Insérer

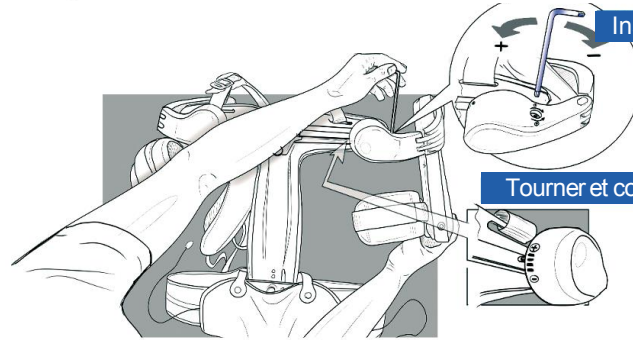

Tourner et contrôler le niveau



RÉGLAGE DU NIVEAU D'ASSISTANCE


Ne sautez pas de 8 à 1 ou de 1 à 8

NOK

Insérer




Retrouver la clé dans la boîte (8mm)
Assurez-vous d'insérer la clé complète

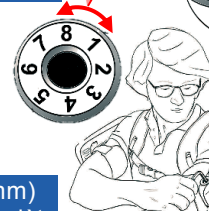

Faire référence au manuel pour choisir le bon niveau d'assistance



Réguler de 1 à 8 le niveaux d'assistance

PORTER LE MATE


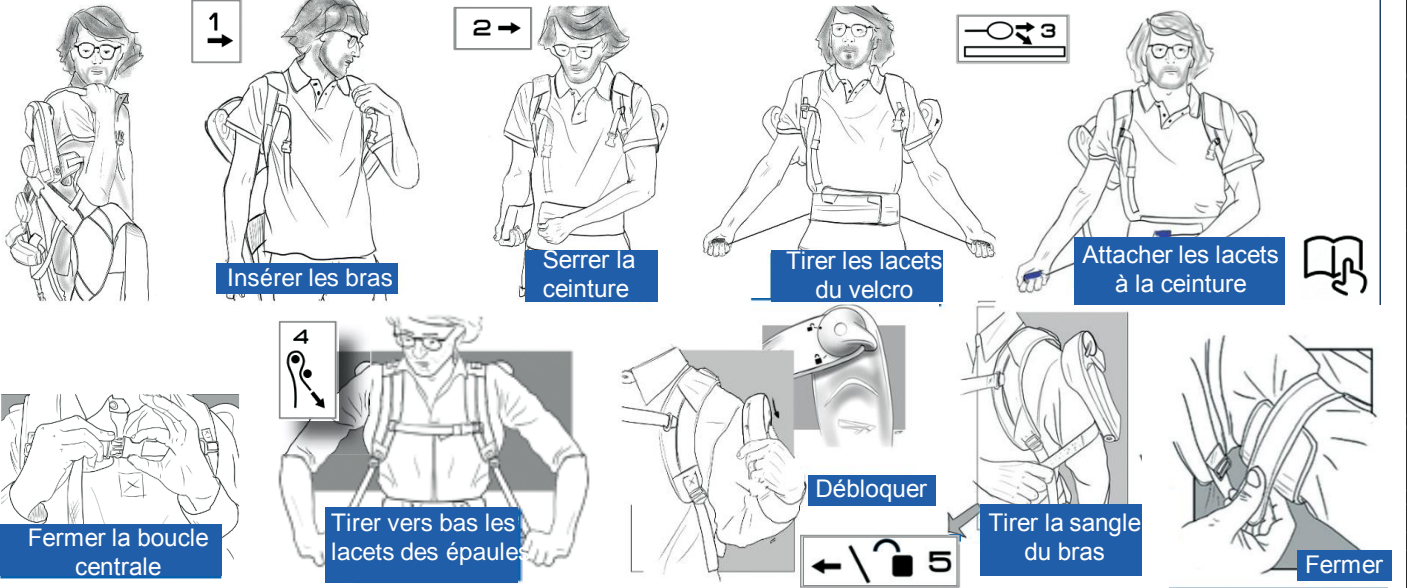


AJUSTEMENT CORRECT

- 1 S'assurer que le Active box soit alignée avec l'axe des épaules. S'assurer aussi que la courbe lombaire de la colonne et la partie haute du support arrière touchent les omoplates
- 2 S'assurer que le Mate ne frotte pas les épaules

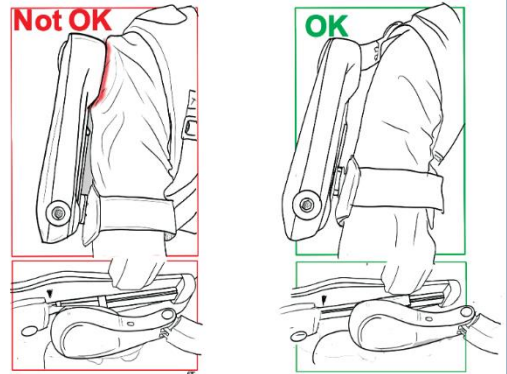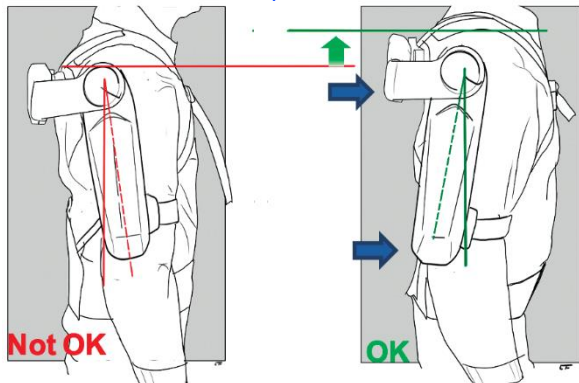

- 3 S'assurer que les Active Box soient parallèles aux bras

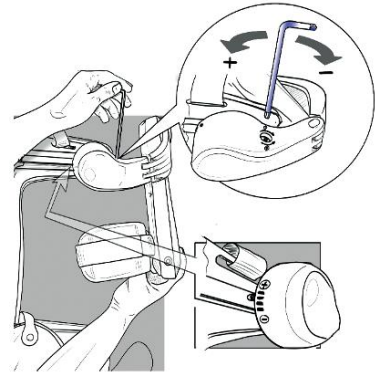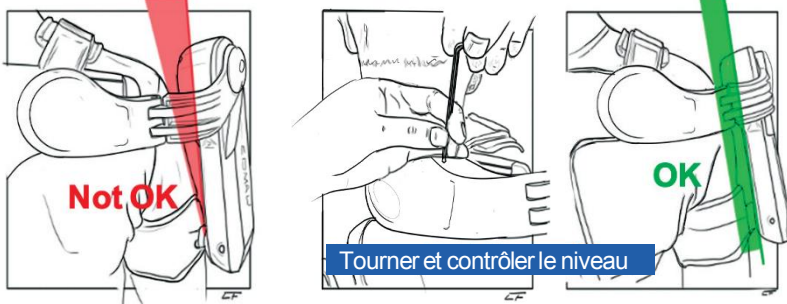

QUITTER LE MATE



The information contained in this brochure is supplied for information only. Comau products in their standard version. Edition Nov 2021
S.p.A. reserves the right to alter specifications at any time without notice for technical or commercial reasons. The illustration does not necessarily show the

Follow us

